


OPERATION GUIDE

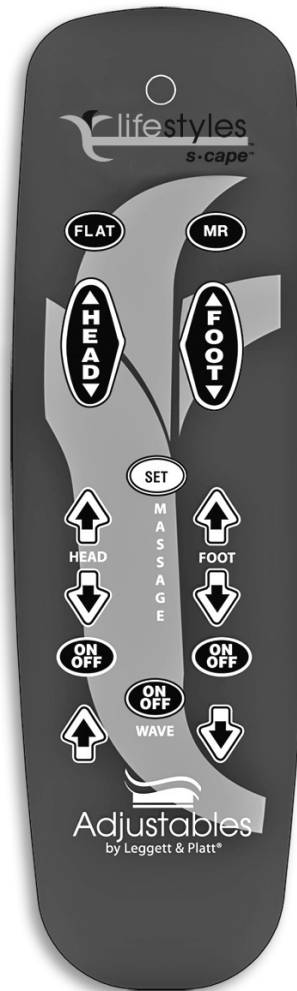

Inspired by life™


CONTENTS

Lifestyles™ S-cape™ Function	4
Lifestyles™ S-cape™ Programming (<i>1 hand control - 1 bed</i>)	5
Lifestyles™ S-cape™ Programming (<i>2 hand controls - 1 bed</i>)	6
Lifestyles™ S-cape™ Programming (<i>1 hand control - 2 beds</i>)	7
Lifestyles™ S-cape™ Programming (<i>2 hand controls - 2 beds</i>)	8
Lifestyles™ S-cape™ Reprogramming (<i>separating 2 beds</i>)	9

Lifestyles™ S-cape™ FUNCTION

IMPORTANT INFORMATION

READ ADVISORY INFORMATION IN THE OWNERS MANUAL CAREFULLY BEFORE USING THIS PRODUCT. THE POTENTIAL FOR ELECTRICAL SHOCK EXISTS IF ELECTRICAL COMPONENTS ARE NOT INSTALLED OR OPERATED PROPERLY.

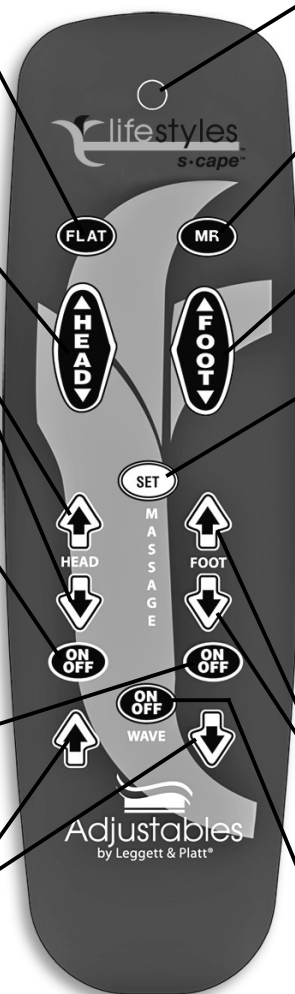

FLAT BUTTON
Press to return bed to the level position. To stop the bed while in motion, press and hold any button until bed movement ceases. This button also turns off the massagers.

HEAD UP/DOWN BUTTON
Press and hold to raise or lower head section.

HEAD MASSAGE ARROW BUTTONS
Press and hold to increase or decrease head massage intensity.

HEAD MASSAGE ON/OFF BUTTON
Switches the head massage on or off. When switched on, the massage has an automatic shut off timer of 30 minutes.

FOOT MASSAGE ON/OFF BUTTON
Switches the foot massage on or off. When switched on, the massage has an automatic shut off timer of 30 minutes.

WAVE ARROW BUTTONS
Press and hold—after the head and/or foot massage, and the wave system have been activated—to increase or decrease wave speed.

TRANSMISSION INDICATOR LIGHT
Verifies a button is being pressed and data is being sent to the bed.

MR BUTTON
Press to recall a position or massage function set by the *set button*.

FOOT UP/DOWN BUTTON
Press and hold to raise or lower foot section.

SET BUTTON
Press to capture any position or function of the bed as a programmed position. Press the *MR button* to return the bed to the custom programmed position.
To Program Set Position:
1. Set the head, foot, massage and/or wave to the desired setting.
2. Press and release the *set button*.
3. Press and release the *MR button*.

FOOT MASSAGE ARROW BUTTONS
Press and hold to increase or decrease foot massage intensity.

WAVE ON/OFF BUTTON
Press—after the head and/or foot massage have been activated—to activate or deactivate the wave vibration system.

NOTE

HAND CONTROL REQUIRES FOUR (4) AAA SIZE BATTERIES. TO CONSERVE BATTERY LIFE, THE TRANSMITTER TURNS OFF ALL FUNCTIONS WHEN ANY BUTTON IS PRESSED FOR MORE THAN 50 SECONDS.

Lifestyles™ S-cape™ PROGRAMMING 1 hand control - 1 bed

The two step procedure below is required to program 1 hand control to operate 1 bed. Before beginning, make certain the bed is plugged into a working grounded electrical outlet. *If programming fails, initiate the programming procedure a second time.*

STEP 1

Locate the J box receiver unit for the bed and press the *learn button* for 1 second and release (**FIGURE 1**). *Note: If you experience difficulty locating or reaching the learn button, simply unplug the power cord and plug back in. This will enable the program mode for 90 seconds.*



FIGURE 1: J box receiver unit.

STEP 2

On the hand control, simultaneously press and hold the *flat* and the *head massage on/off* buttons (**FIGURE 2**). The **transmission indicator light will flash slowly and then flash rapidly to indicate programming mode**. Continue to hold for 5 seconds and then release the buttons.

One hand control is now programmed to operate one bed.

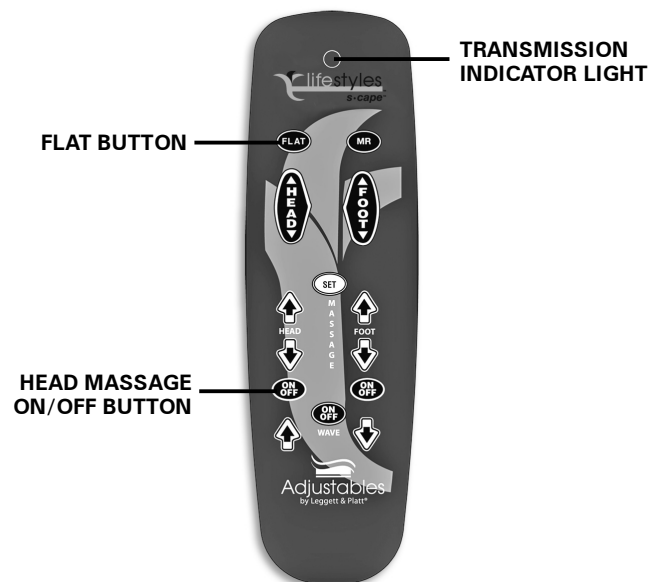
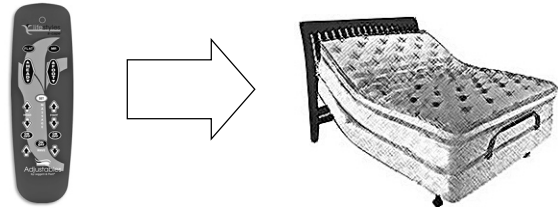


FIGURE 2

Lifestyles™ S-cape™ PROGRAMMING 2 hand controls - 1 bed

The three step procedure below is required to program 2 hand controls to operate 1 bed. Before beginning, make certain the bed is plugged into a working grounded electrical outlet. *If programming fails, initiate the programming procedure a second time.*

STEP 1

Locate the J box receiver unit for the bed and press the *learn button* for 1 second and release (**FIGURE 1**). *Note: If you experience difficulty locating or reaching the learn button, simply unplug the power cord and plug back in. This will enable the program mode for 90 seconds.*

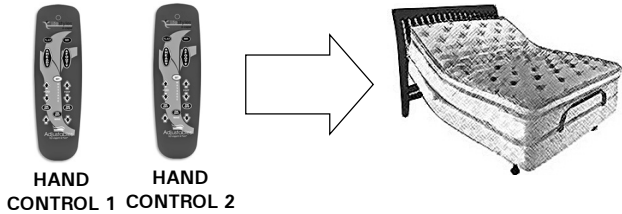


FIGURE 1: J box receiver unit.

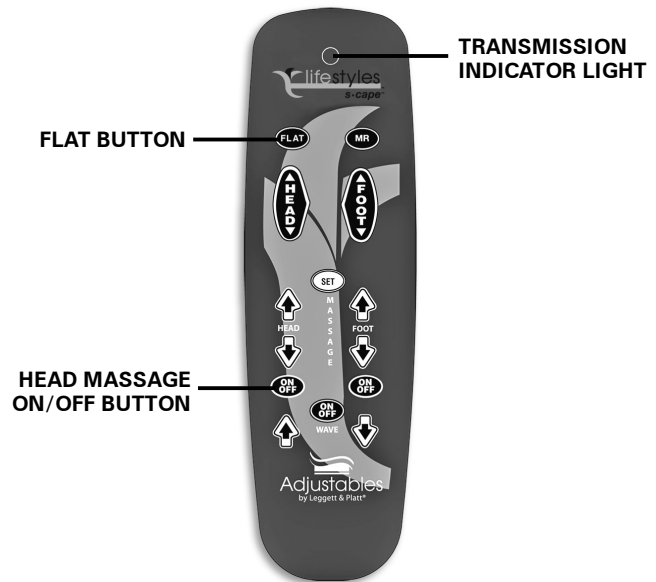


FIGURE 2

STEP 2

On hand control 1, simultaneously press and hold the *flat* and the *head massage on/off* buttons (**FIGURE 2**). The **transmission indicator light will flash slowly and then flash rapidly to indicate programming mode**. Continue to hold for 5 seconds and then release the buttons.

STEP 3

Repeat Step 1 and Step 2 with hand control 2.

Two hand controls are now programmed to operate one bed.

NOTE

OPERATE ONLY ONE (1) HAND CONTROL AT A TIME. OPERATING TWO (2) HAND CONTROLS AT THE SAME TIME WILL MOMENTARILY BLOCK BOTH RF SIGNALS AND PREVENT BOTH CONTROLS FROM FUNCTIONING.

Lifestyles™ S-cape™ PROGRAMMING 1 hand control - 2 beds

The three step procedure below is required to program 1 hand control to operate 2 beds. Before beginning, make certain the beds are plugged into a working grounded electrical outlet. *If programming fails, initiate the programming procedure a second time.*

STEP 1

Locate the J box receiver unit for the bed and press the *learn button* for 1 second and release (**FIGURE 1**). *Note: If you experience difficulty locating or reaching the learn button, simply unplug the power cord and plug back in. This will enable the program mode for 90 seconds.*

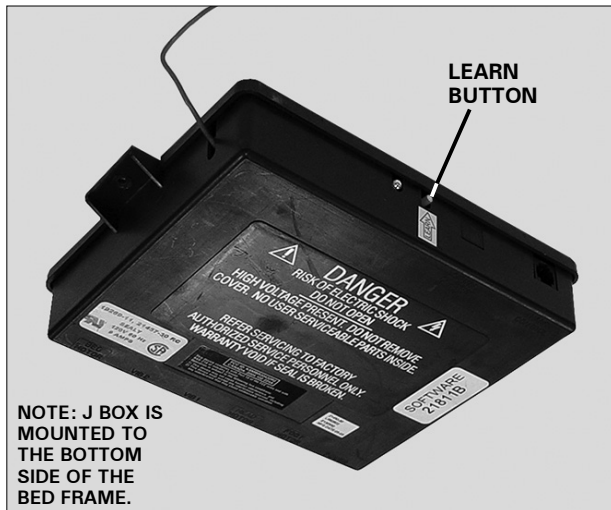
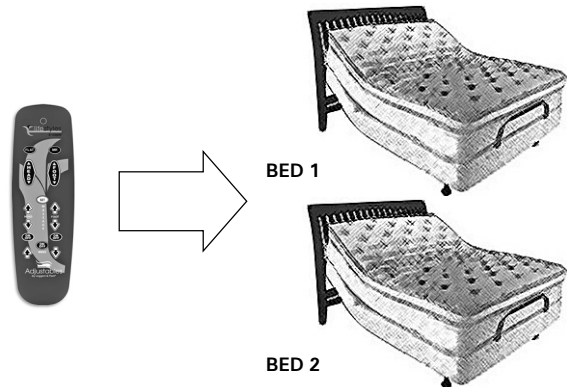


FIGURE 1: J box receiver unit.

STEP 2

On the hand control, simultaneously press and hold the *flat* and the *head massage on/off* buttons (**FIGURE 2**). The *transmission indicator light* will *flash slowly* and then *flash rapidly* to indicate **programming mode**. Continue to hold for 5 seconds and then release the buttons.

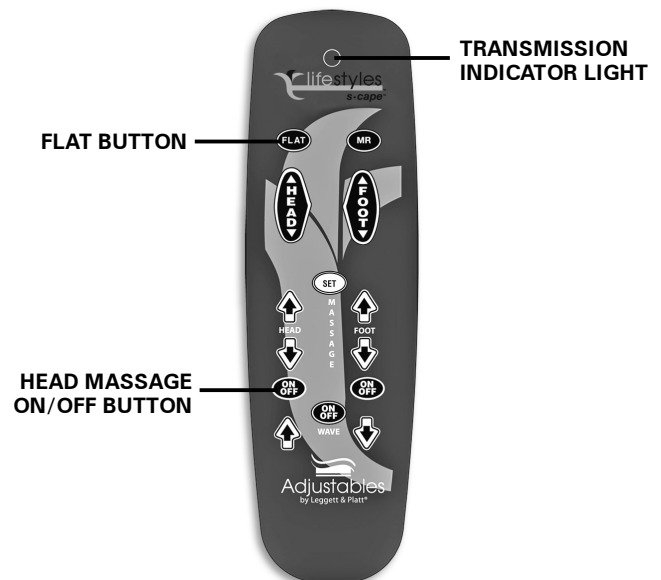


FIGURE 2

STEP 3

Repeat Step 1 and Step 2 for bed 2.

One hand control is now programmed to operate two beds.

Lifestyles™ S-cape™ PROGRAMMING 2 hand controls - 2 beds

The six step procedure below is required to program 2 hand controls to operate 2 beds. Before beginning, make certain the beds are plugged into a working grounded electrical outlet. *If programming fails, initiate the programming procedure a second time.*

STEP 1

Locate the J box receiver unit for the bed and press the *learn button* for 1 second and release (**FIGURE 1**). *Note: If you experience difficulty locating or reaching the learn button, simply unplug the power cord and plug back in. This will enable the program mode for 90 seconds.*



FIGURE 1: J box receiver unit.

STEP 2

On hand control 1, simultaneously press and hold the *flat* and the *head massage on/off buttons* (**FIGURE 2**). The **transmission indicator light** will *flash slowly* and then *flash rapidly* to indicate programming mode. Continue to hold for 5 seconds and then release the buttons.

STEP 3

Repeat Step 1 and Step 2 with hand control 2.

STEP 4

On bed 2, press the *learn button* on the J box for 1 second and release (**FIGURE 1**).

STEP 5

On hand control 1, simultaneously press and hold the *flat* and the *head massage on/off buttons* (**FIGURE 2**). The **transmission indicator light** will *flash slowly* and then *flash rapidly* to indicate programming mode. Continue to hold for 5 seconds and then release the buttons.

STEP 6

Repeat Step 4 and Step 5 with hand control 2.

Two hand controls are now programmed to operate two beds.

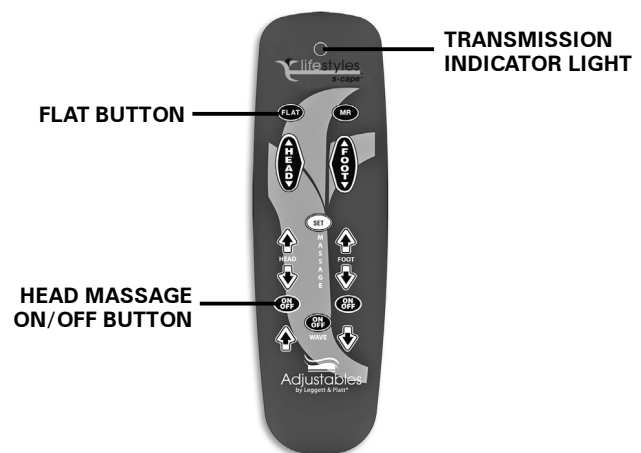
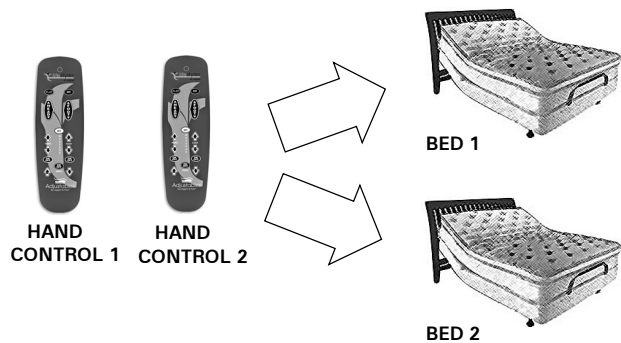


FIGURE 2

NOTE

OPERATE ONLY ONE (1) HAND CONTROL AT A TIME. OPERATING TWO (2) HAND CONTROLS AT THE SAME TIME WILL MOMENTARILY BLOCK BOTH RF SIGNALS AND PREVENT BOTH CONTROLS FROM FUNCTIONING.

Lifestyles™ S-cape™ REPROGRAMMING *separating 2 beds*

The six step procedure below is required to separate 2 hand controls from operating 2 beds. One hand control per bed operation will result. Before beginning, make certain the beds are plugged into a working grounded electrical outlet. *If programming fails, initiate the programming procedure a second time.* **NOTE: OPERATE ONLY ONE (1) HAND CONTROL AT A TIME. OPERATING TWO (2) HAND CONTROLS AT THE SAME TIME WILL MOMENTARILY BLOCK BOTH RF SIGNALS AND PREVENT BOTH CONTROLS FROM FUNCTIONING.**

STEP 1

Locate the J box receiver unit for the bed and press the *learn button* for 1 second and release (**FIGURE 1**). *Note: If you experience difficulty locating or reaching the learn button, simply unplug the power cord and plug back in. This will enable the program mode for 90 seconds.*



FIGURE 1: J box receiver unit.

STEP 2

On hand control 1, simultaneously press and hold the *flat* and the *head massage on/off* buttons (**FIGURE 2**). The transmission indicator light will *flash slowly* and then *flash rapidly* to indicate programming mode. Continue to hold for 5 seconds and then release the buttons.

STEP 3

Repeat Step 1 and Step 2 with hand control 1. **Note: wait 90 seconds before proceeding to Step 4.**

STEP 4

On bed 2, press the *learn button* on the J box for 1 second and release (**FIGURE 1**).

STEP 5

On hand control 2, simultaneously press and hold the *flat* and the *head massage on/off* buttons (**FIGURE 2**). The transmission indicator light will *flash slowly* and then *flash rapidly* to indicate programming mode. Continue to hold for 5 seconds and then release the buttons.

STEP 6

Repeat Step 4 and Step 5 with hand control 2.

Independent hand control operation is now restored (hand control 1 operating bed 1; hand control 2 operating bed 2).

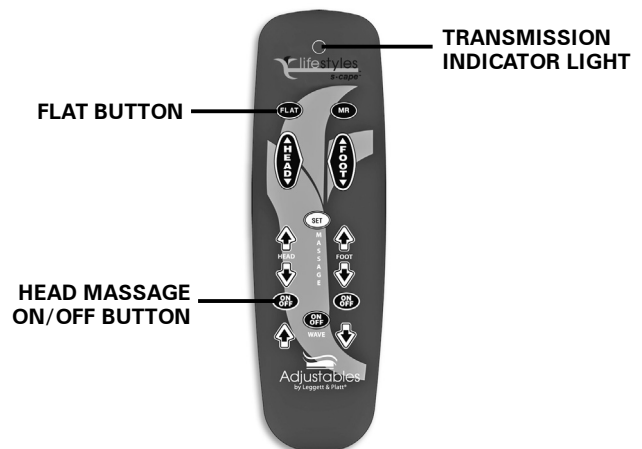
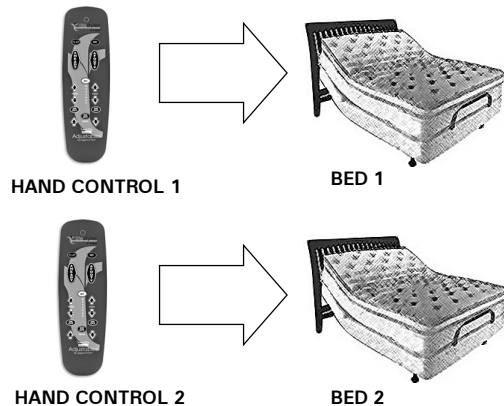


FIGURE 2

customer (care))

Contact customer care toll free at 800-888-3078.

For customer care online, email:

accustomerservice@leggett.com



Adjustables
by Leggett & Platt®

www.lifestylesbyleggett.com